 
 
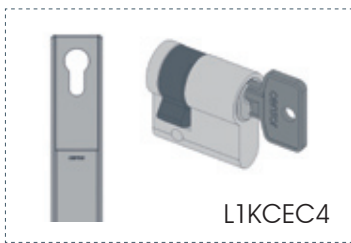 
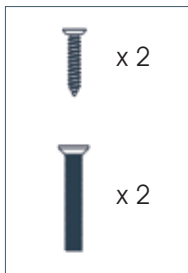 


# centor<sup>®</sup>

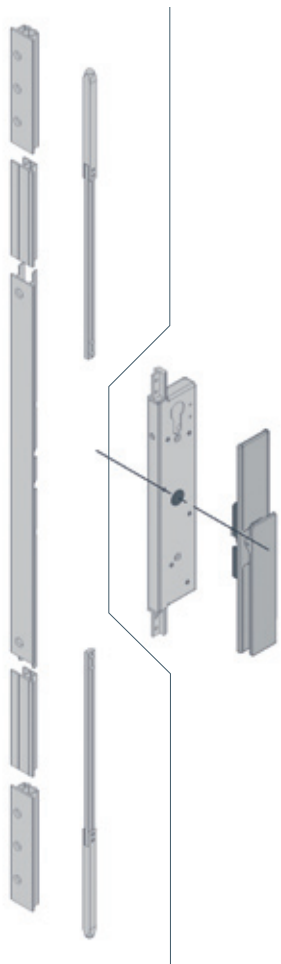

 
 
## Centor LT installation instructions

centor<sup>®</sup>  
*Moved by Innovation*

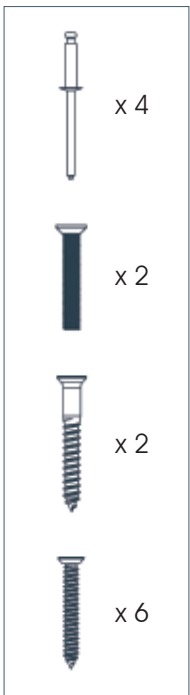

# A

# Lockcalc LT LA.xls

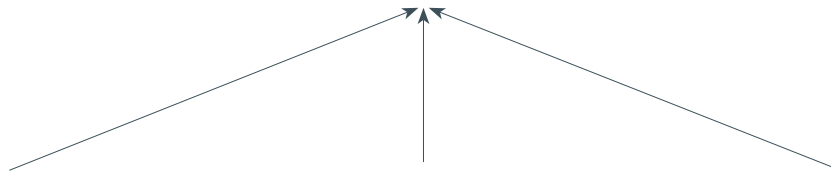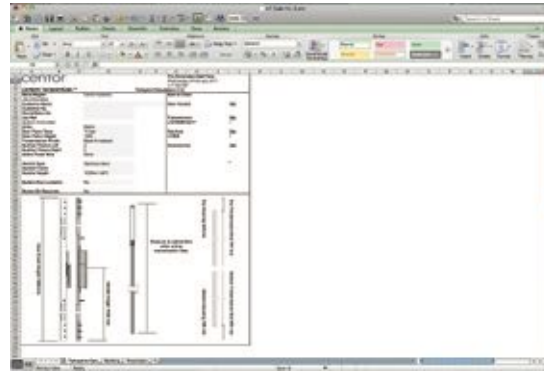

[www.centor.eu](http://www.centor.eu)



[www.centorusa.com](http://www.centorusa.com)




[www.centor.com.au](http://www.centor.com.au)





# B

 centor<sup>®</sup>

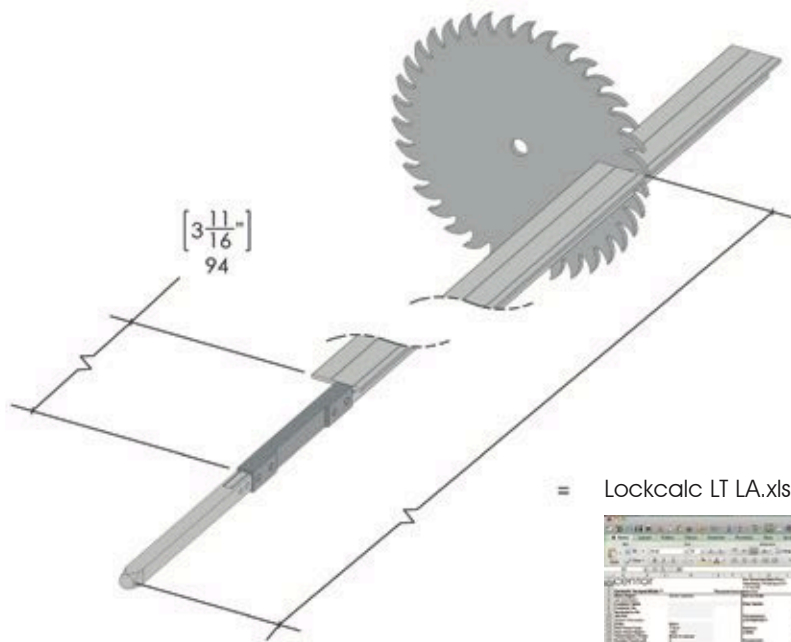




= Lockcalc LT LA.xls

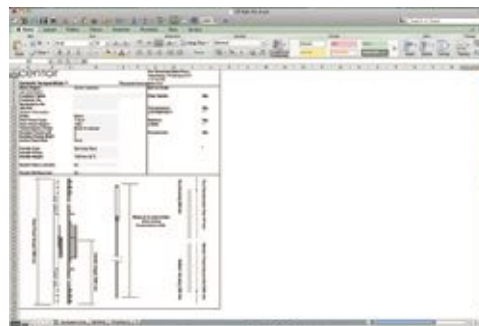 

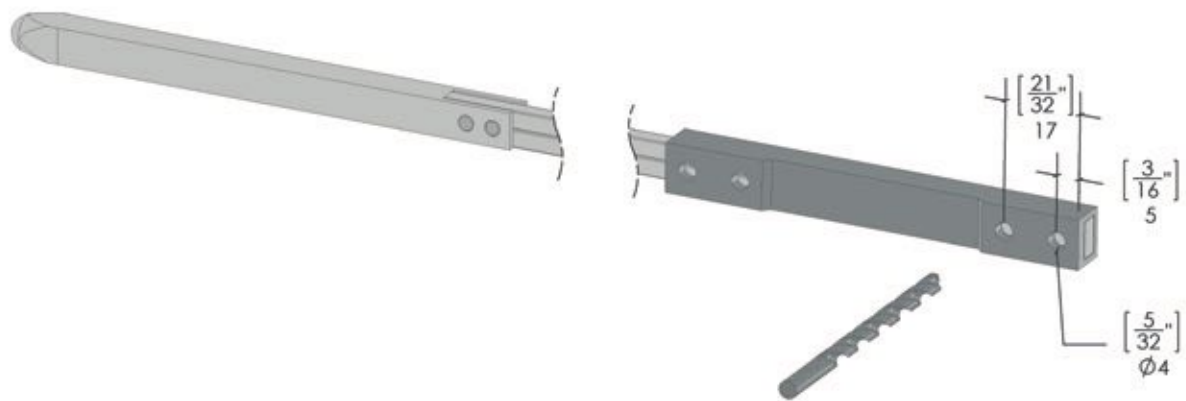 





centor®

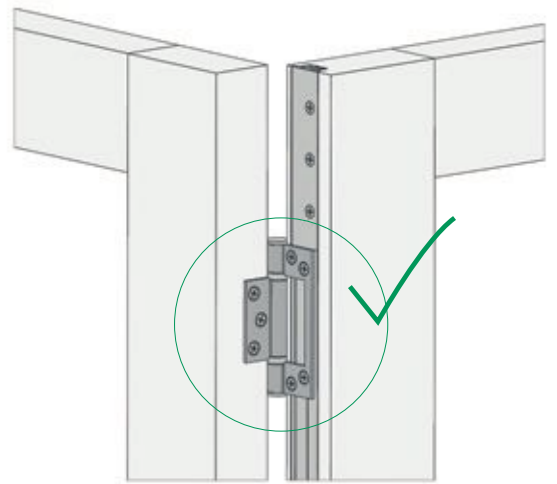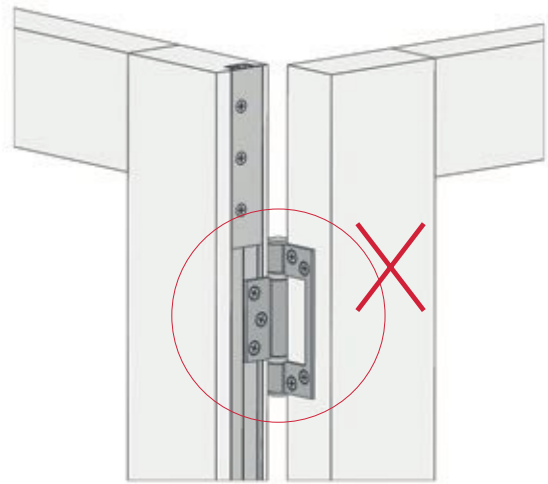  
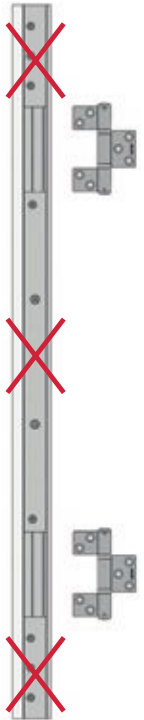 



Centor E2




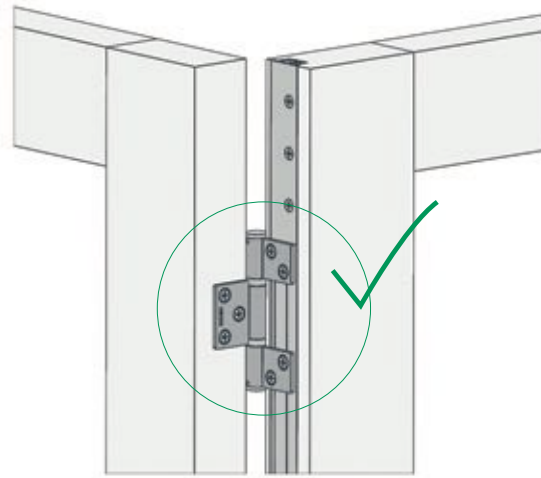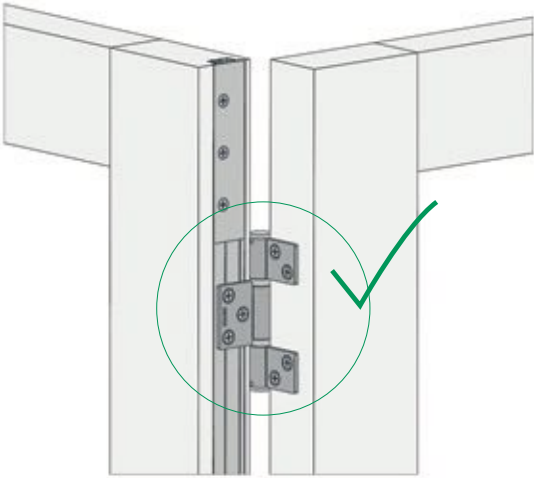  

Centor E3

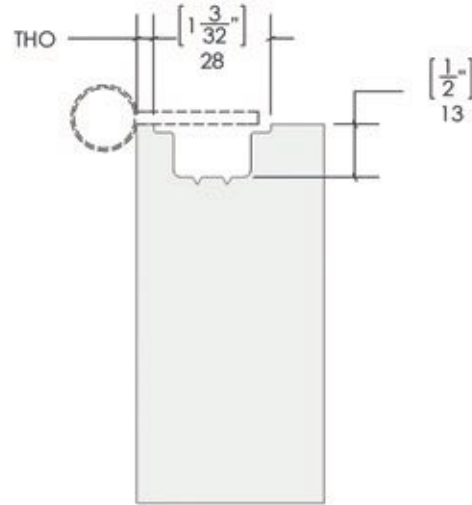 
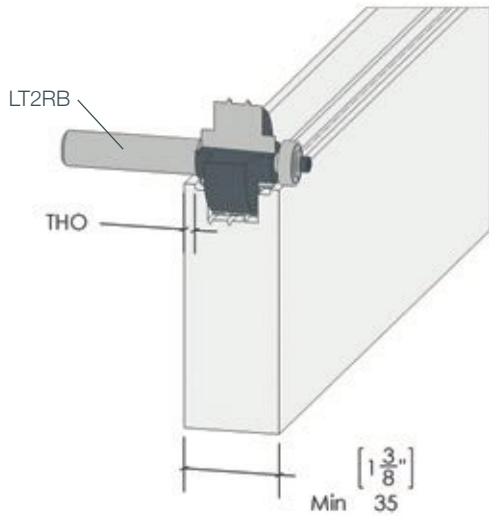 




THO	
4mm (5/32")	Lockcalc LT LA.xls 
11mm (7/16")	
12mm (15/32")	
15mm (19/32")	


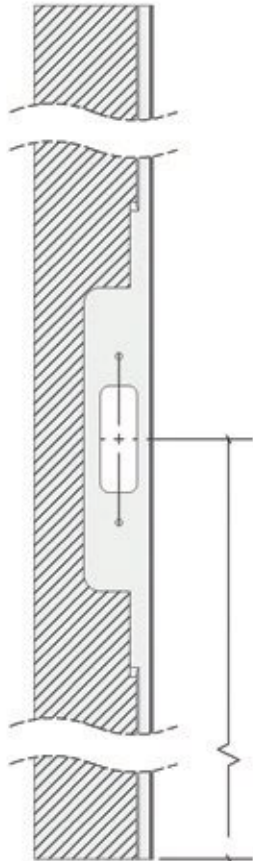 


Lockcalc LT LA.xls



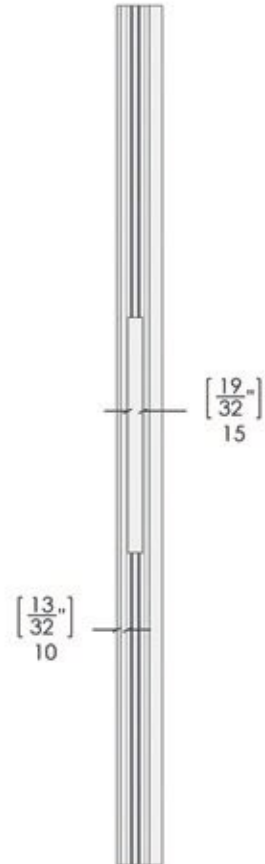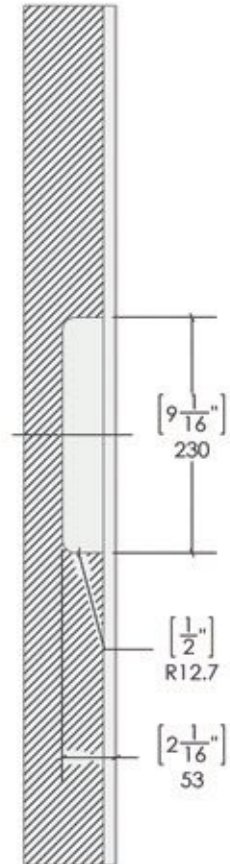  

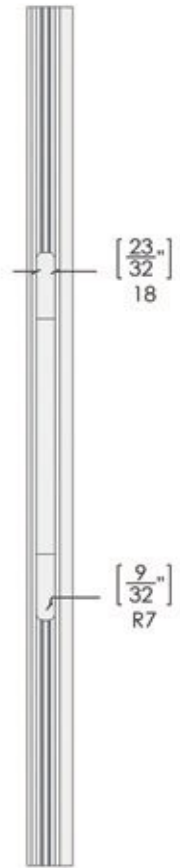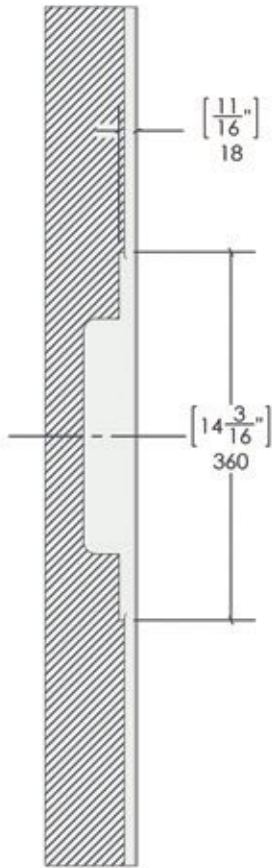  

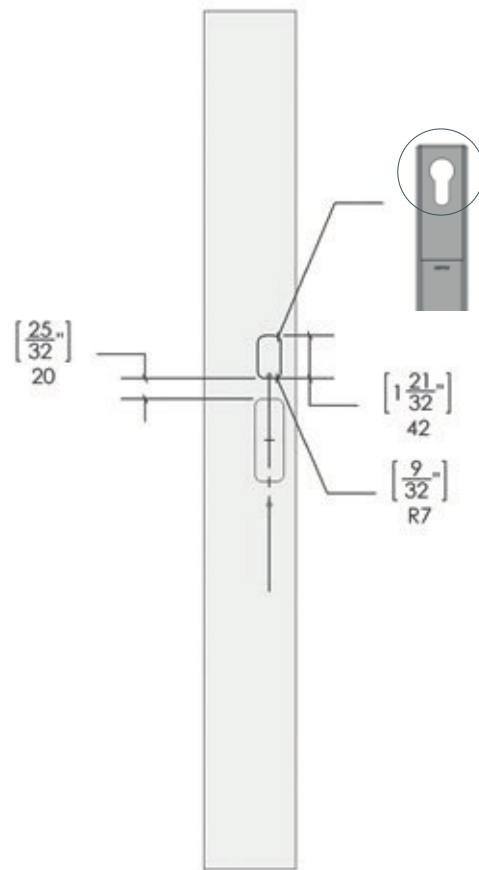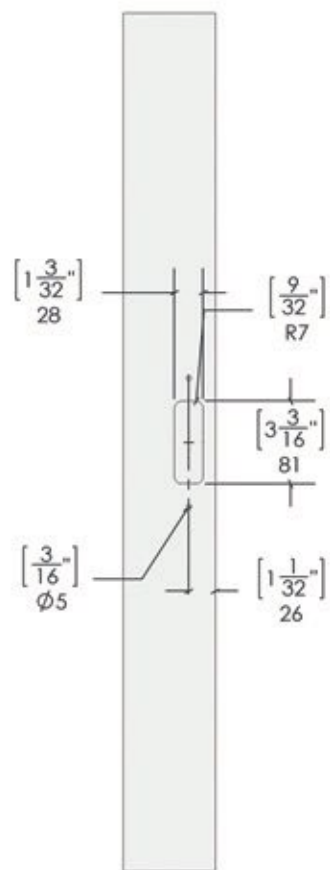  








# D

   centor<sup>®</sup>



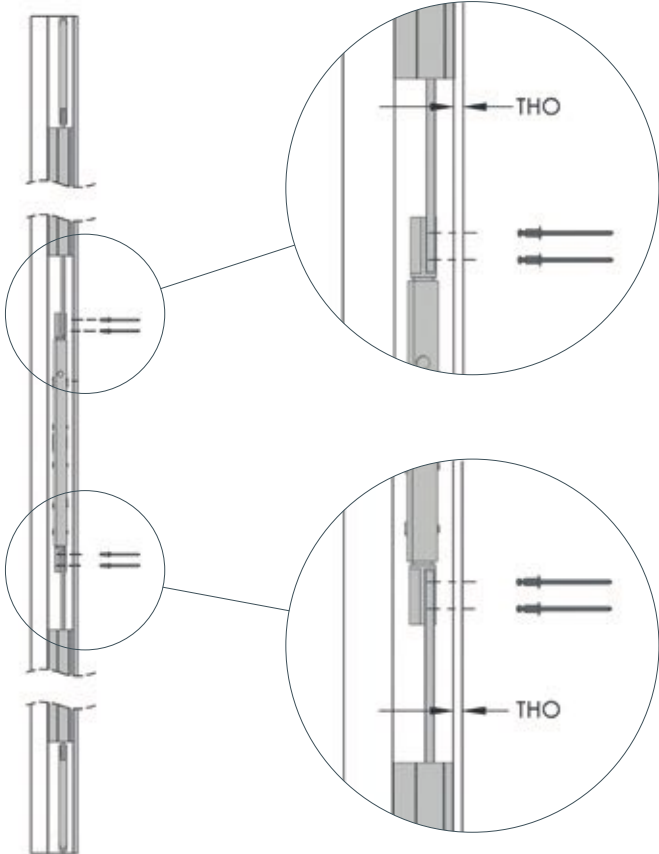

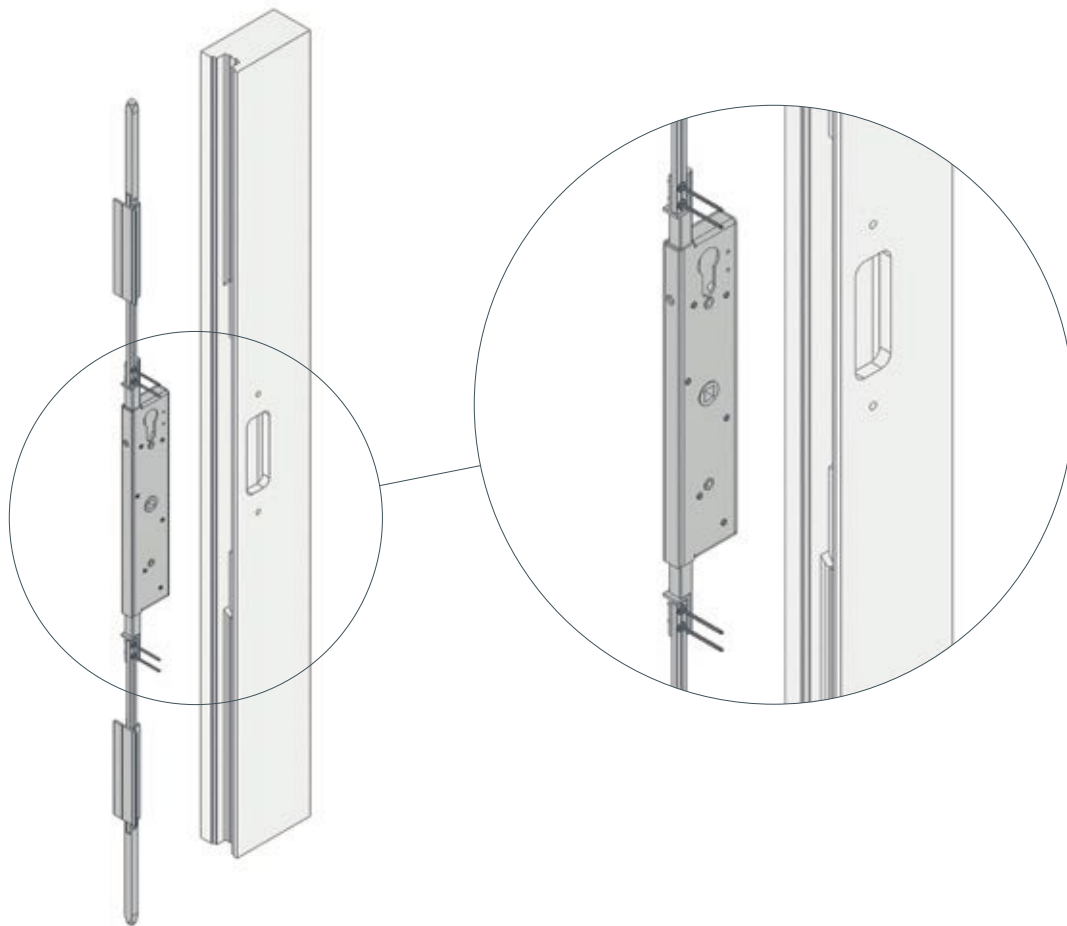


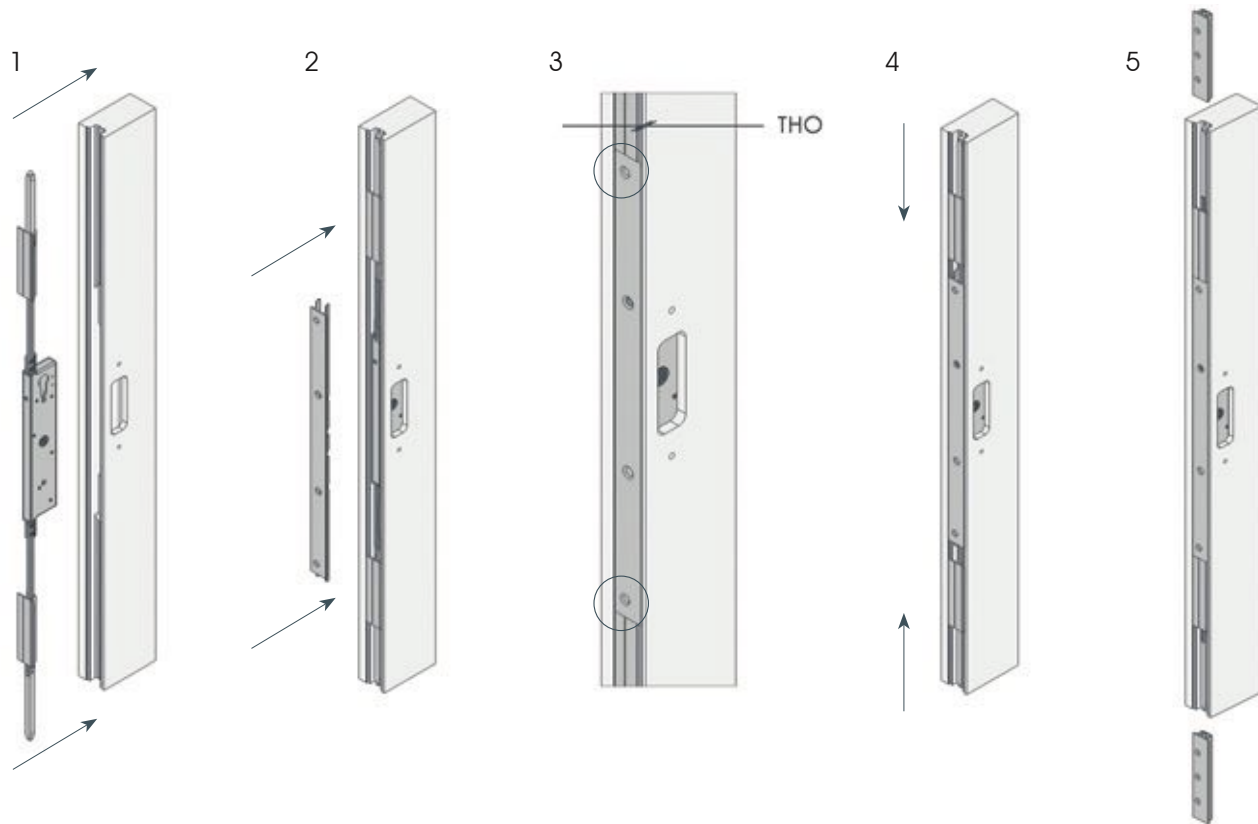




# E

 centor™

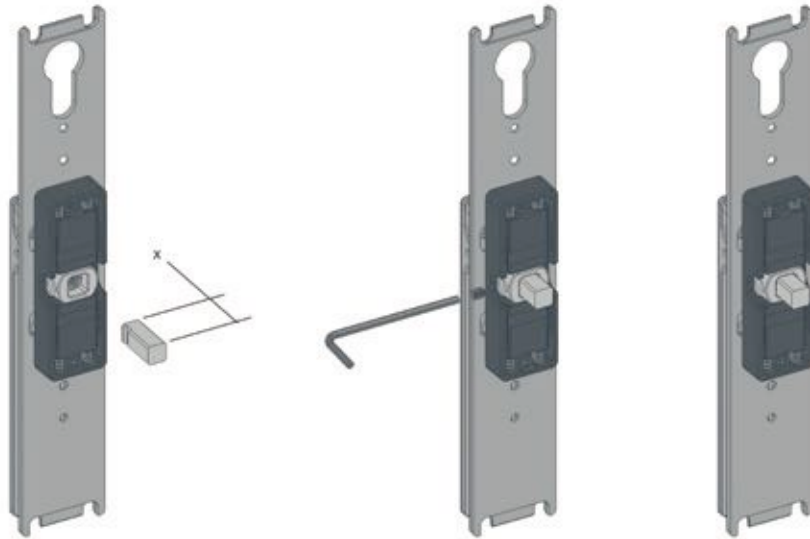





X=	
20mm (25/32")	Lockcalc LT LA.xls 
30mm (1 3/16")	




# F

      
centor<sup>®</sup>

 
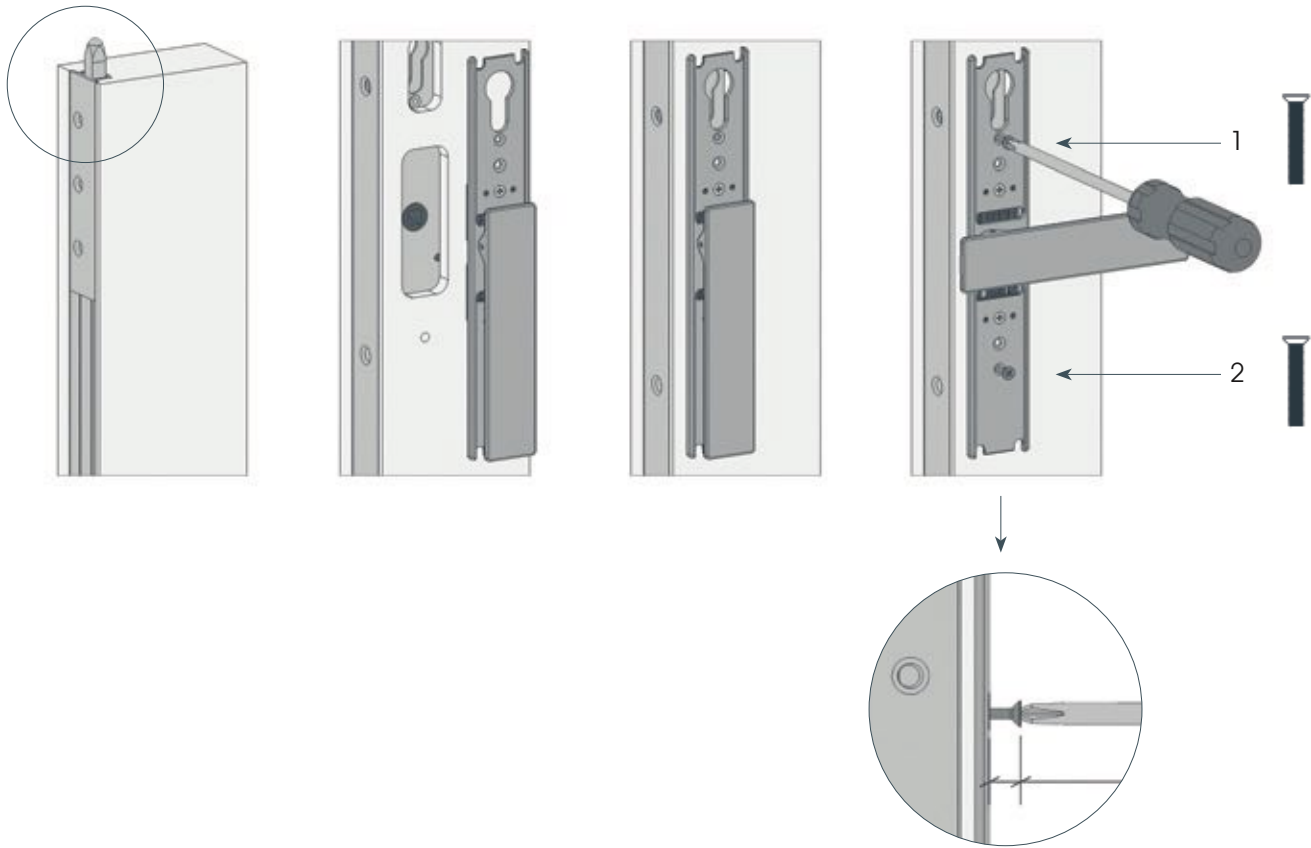 


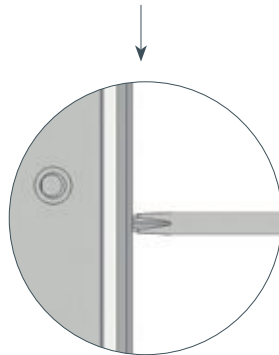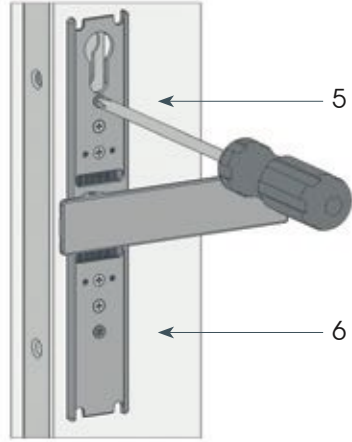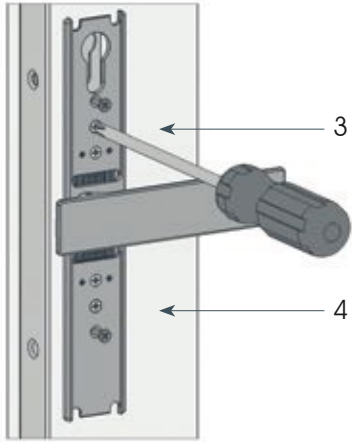 


 
 


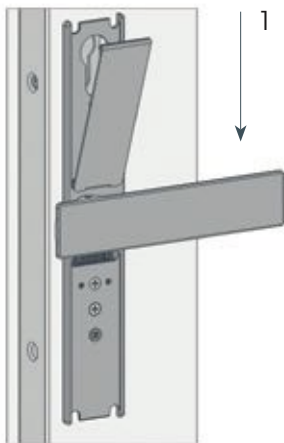

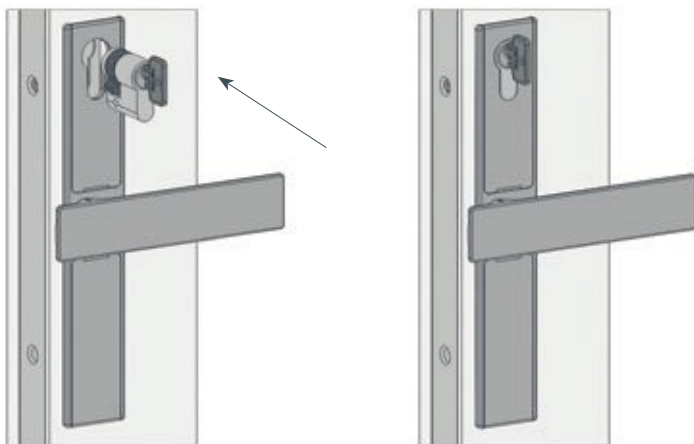

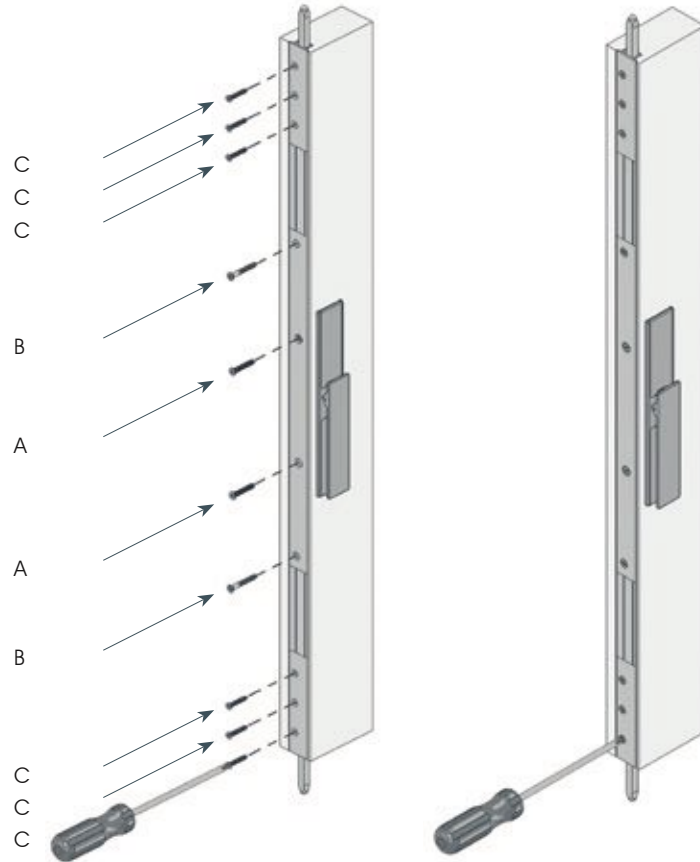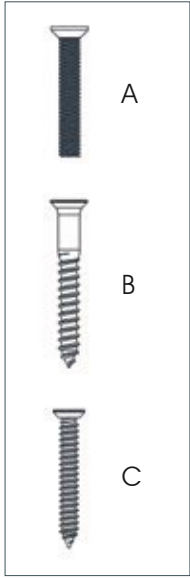

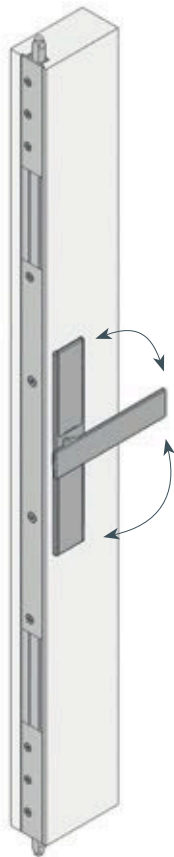

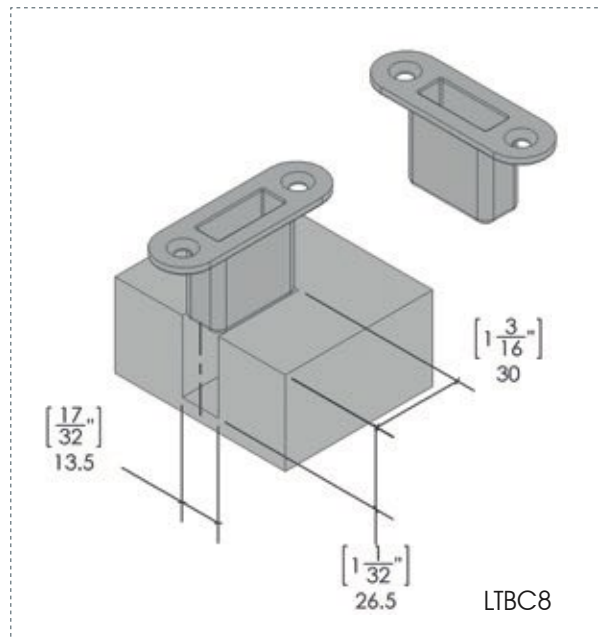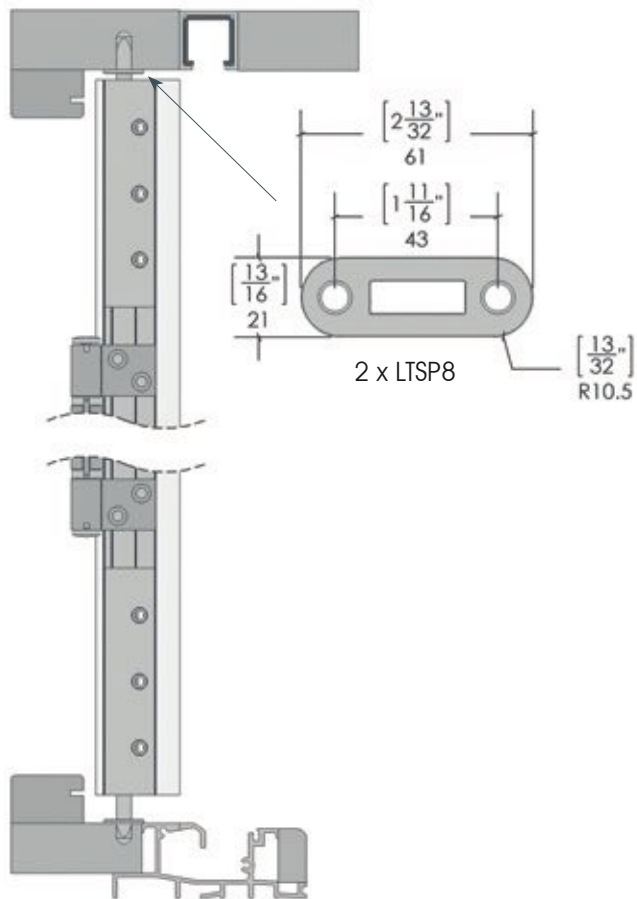



**Centor Europe**

+44 (0)121 701 2500

[mail@centor.eu](mailto:mail@centor.eu)

[www.centor.eu](http://www.centor.eu)

**Centor North America**

+1 630 957 1000

[mail@centorusa.com.au](mailto:mail@centorusa.com.au)

[www.centorusa.com.au](http://www.centorusa.com.au)

**Centor Asia Pacific**

1300 CENTOR

[mail@centor.com.au](mailto:mail@centor.com.au)

[www.centor.com.au](http://www.centor.com.au)